



## **396-2578Y1** LiquiShift Single Section Banjo Valves Assembly and Mounting

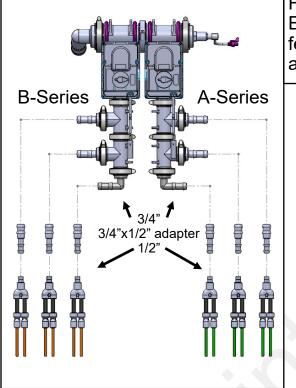


Feed section valves with 1-1/2" hose from pump. Each section valve may be split as necessary to feed the correct number of metering tube assemblies. (12 row example shown at left.)


The smaller ID tubing must be connected to the "A" series valves.

> Color I.D. Black 0.187 Yellow 0.170 Orange 0.150 Tan 0.125 0.110 Green 0.096 Blue Purple 0.080 Gray 0.060

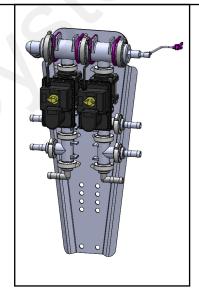

Dual metering tube comes preassembled. Hose barb ends go to section valves, 3/8" tubing goes to flow indicators.

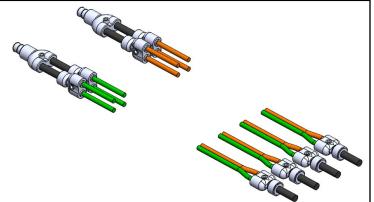

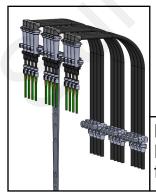


Mount flow indicators in banks (can be on one or multiple brackets). Dual metering tube Y's will attach to bottom of flow indicator. Top of flow indicator outputs through check valve to the row.




## LiquiShift Single Section Banjo Example Generic Planter Setup

Flowmeter Kit	Range	Hose Barb Size
500-02-2050	.3-5 GPM	3/4"
500-02-2060	.6-13 GPM	1"
500-02-2070	1.3-26 GPM	1"
500-02-1080	2.6-53 GPM	1-1/2"

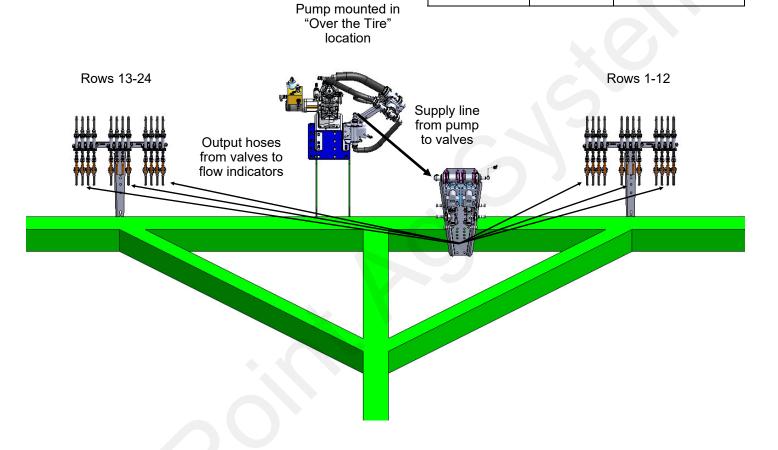


Valves A1 and B1 both feed the pre-assembled metering tube set which goes to the same set of flow indicators.

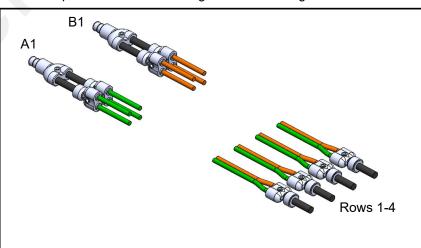



## LiquiShift Single Section Banjo Harness Schematic

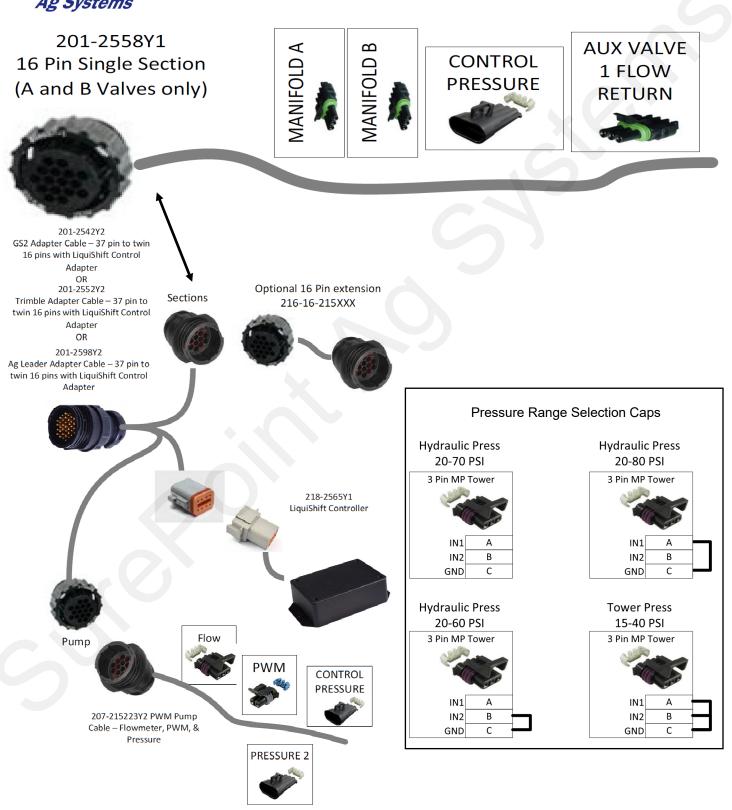

396-2578Y1 LiquiShift Single Section Banjo Page 3 © 2014-2022 SurePoint Ag Systems, Inc. Revised: 6/24/2022