


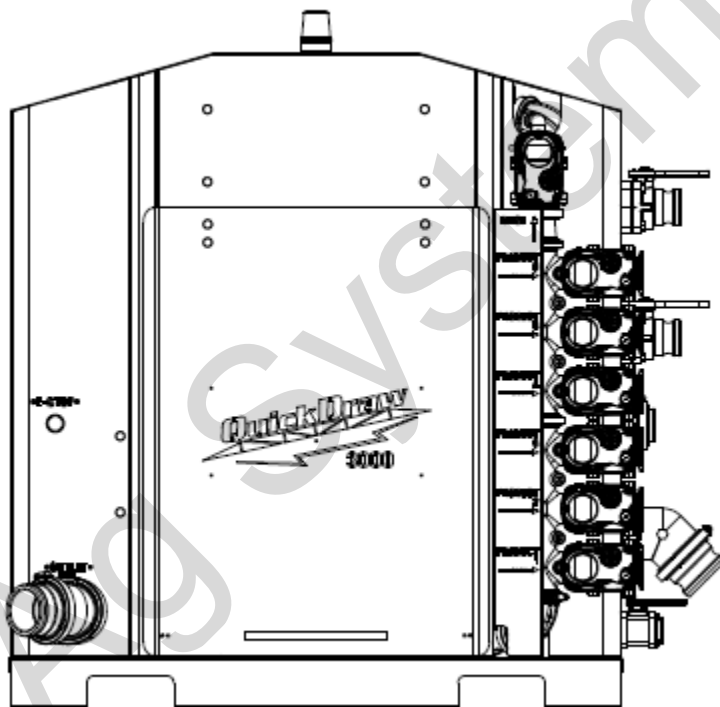

## QuickDraw™ Welding Warning



**FAILURE TO ISOLATE QUICKDRAW™ COMPONENTS FROM WELDING VOLTAGE, OR ANY VOLTAGE SURGE, VOIDS ALL WARRANTIES**

SurePoint Ag Systems advises against welding on anything physically connected to QuickDraw™ hardware and electrical harnessing. Damage to electrical components can, and will, render your QuickDraw™ inoperable. If welding is required on any product, trailer, plant stand, or similar items connected to QuickDraw™, it is crucial to disconnect all wiring that enters or exits the cabinet and to remove the internal cabinet battery. It is vital to ensure that the electrical components within the cabinet are isolated from welding voltage, or any other voltage surges.