



## Flash Updater Install Instructions

- If the installer did not automatically launch, start it manually by going to the ECU Updater folder then pcان-usb\Flash\_Installer and double clicking Setup.exe. Otherwise jump to Step 1.

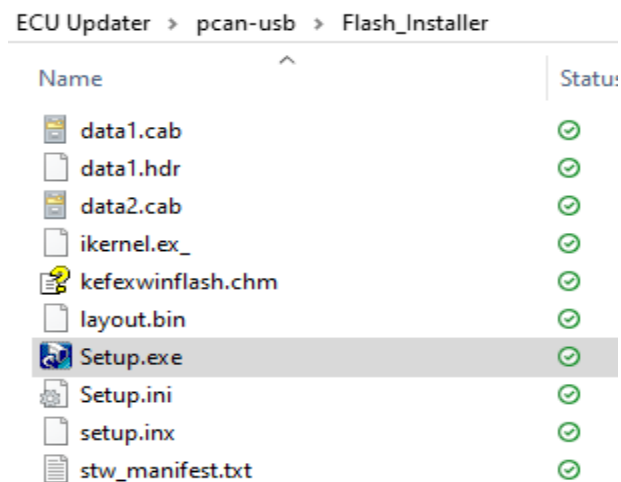


1. Ensure Modify is selected, as shown in the image below, and click Next.

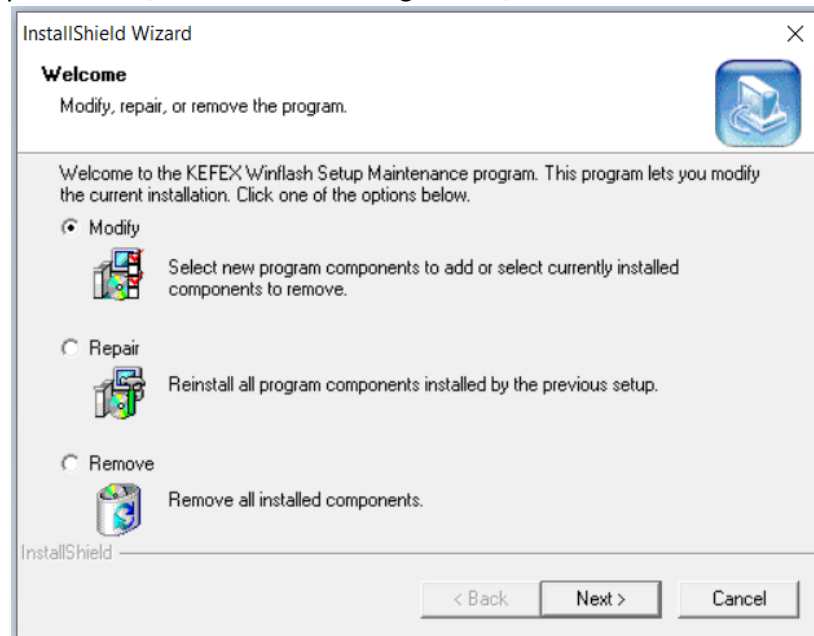


2. Click Next again on the Select Components screen.


3. Ensure PEAK-System Technik GmbH CAN interface is selected and click Next.

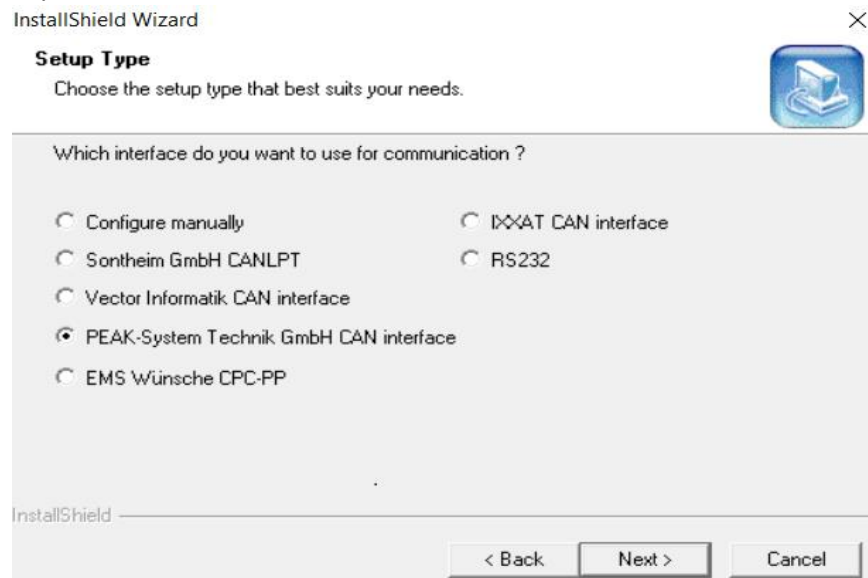

4. Click Yes on the next screen.

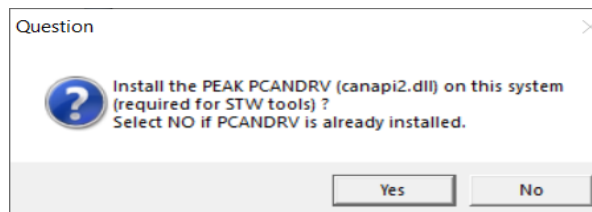


5. Click OK on the next screen.

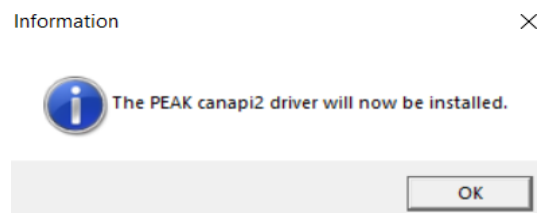


6. Click Next on the following screen.




7. Accept the License Agreement and click Next.
8. Select the desired language and click next.
9. Click Next on the Destination Directory screen.
10. Click Next on the Ready to Install Application screen.
11. After installing, click Finish.
12. Select PCAN USB on the Setup Type, then click Next.

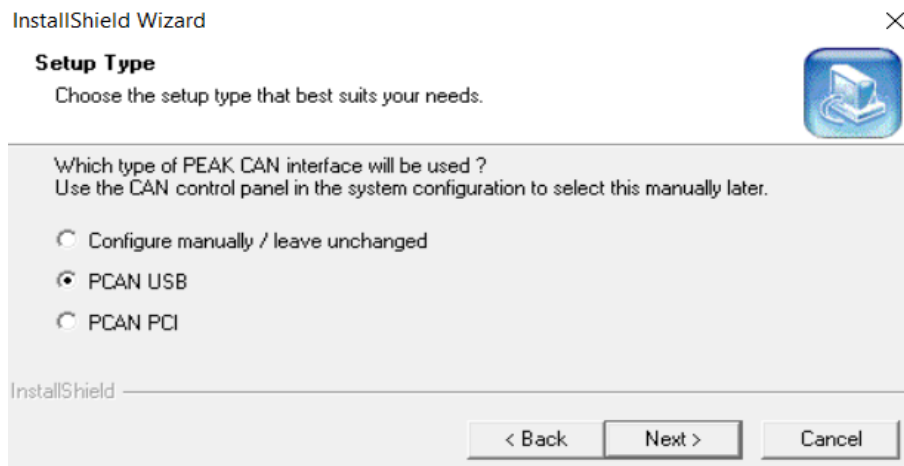

13. Click Next on the Select name of the CAN network screen.

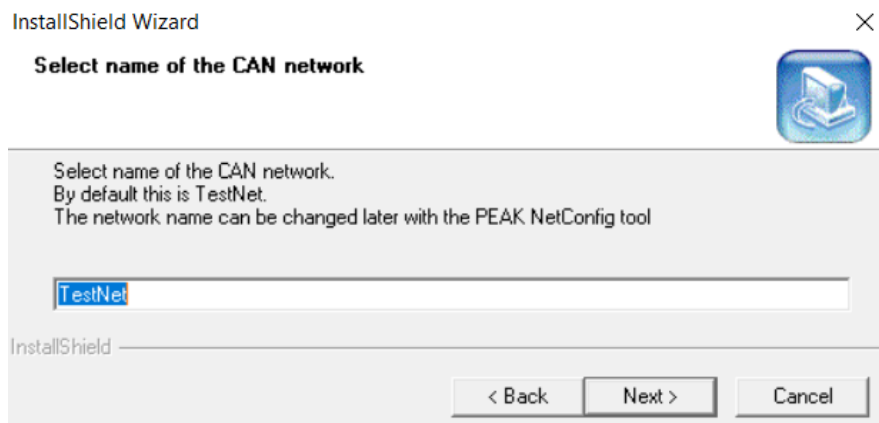

14. Click OK on the Installation complete screen.

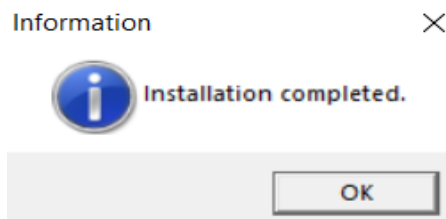

This installation is now complete. Continue to the PEAK installation, if not already complete.