




396-75041

Lemken Torpedo Mounting Instructions

Kit Number: 516-03-100100

Description: Lemken Torpedo Mounting Kit

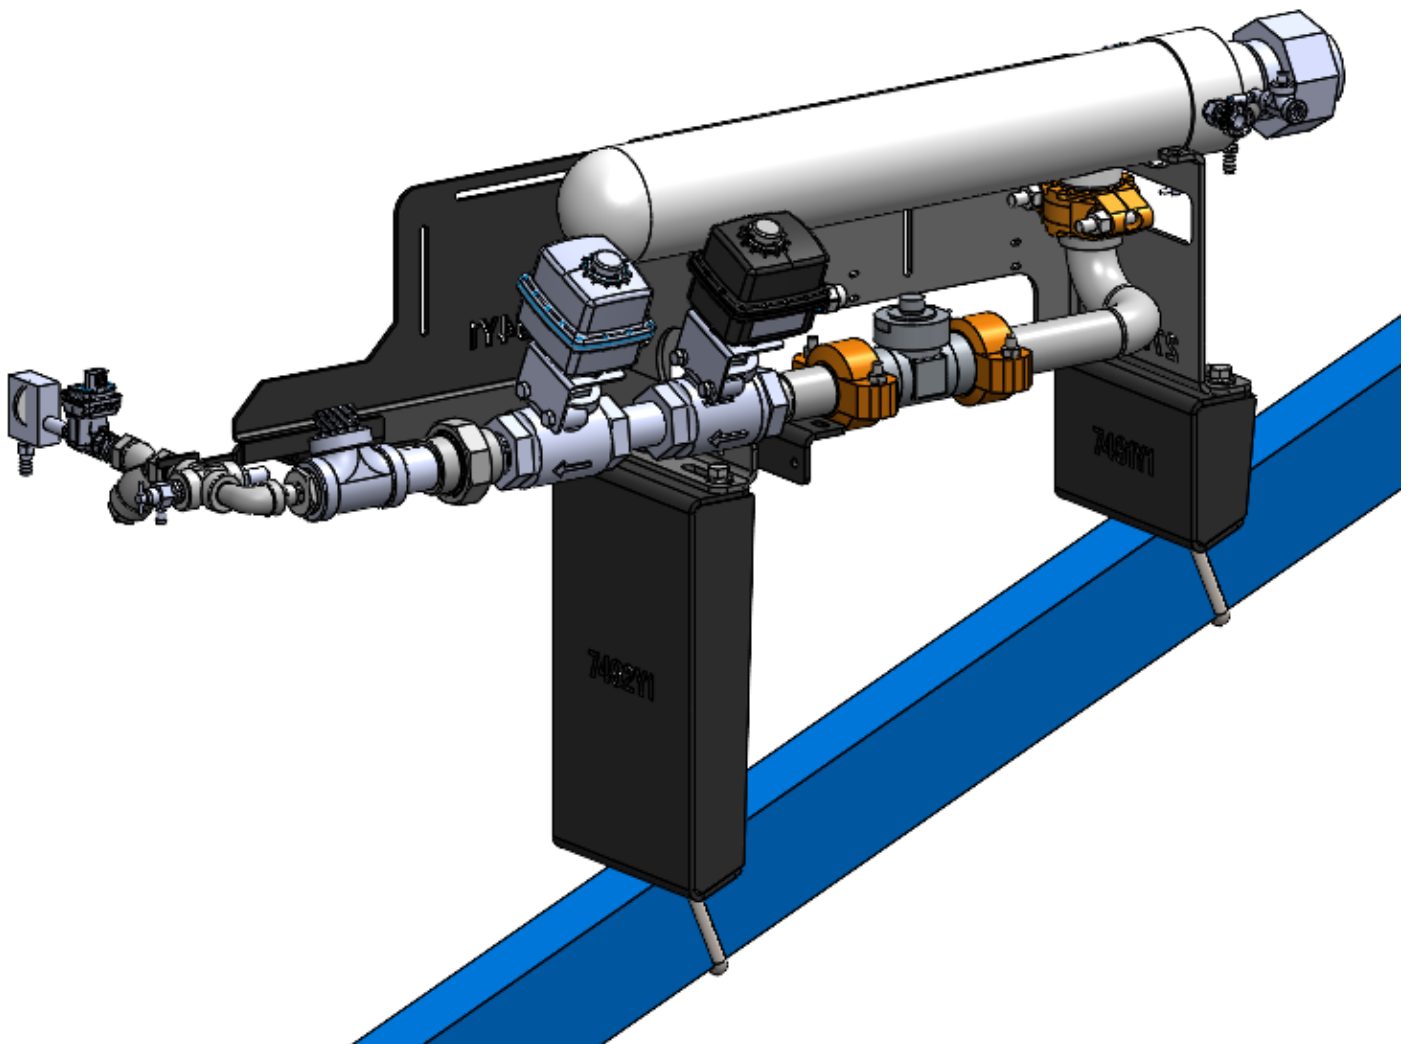



SurePoint Ag Systems

Fertilizer Tank Safety and Warnings



SurePoint Ag Systems does not recommend transporting your implement with full fertilizer tanks. Doing so can result in damage to brackets and implement.



Remember to wear proper PPE (*Personal Protective Equipment*) when installing SurePoint Ag Systems fertilizer tank kits. Proper PPE includes gloves, foot and eye protection, and hearing protection.



SurePoint Ag Systems fertilizer application systems require winterization when not in use. Refer to your product manual for winterization procedures.



Failure to follow the above warnings can result in personal injury, damage to your SurePoint Ag Systems products, and damage to your implement.



Parts List and Exploded View

Kit Number: 516-03-100100

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	462-7491Y1-BK	Lemken Torpedo Mounting Bracket - Rear	1
2	462-7492Y1-BK	Lemken Torpedo Mounting Bracket - Front	1
3	307-080108-5	Bolt, Flange Head, 1/2"-13 x 1-1/2"	4
4	323-08	Nut, Serrated Flange, 1/2"-13	4
5	380-1009	1/2" U-Bolt Kit - Fits 3" x 5"	2

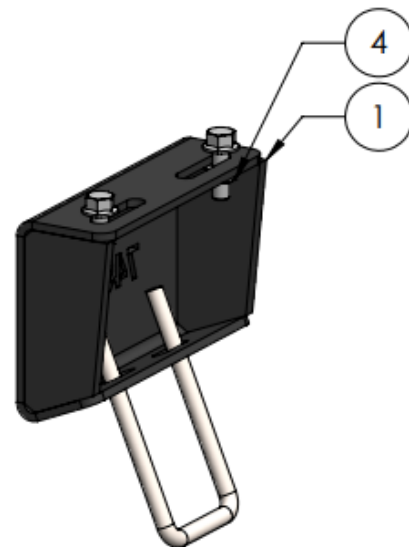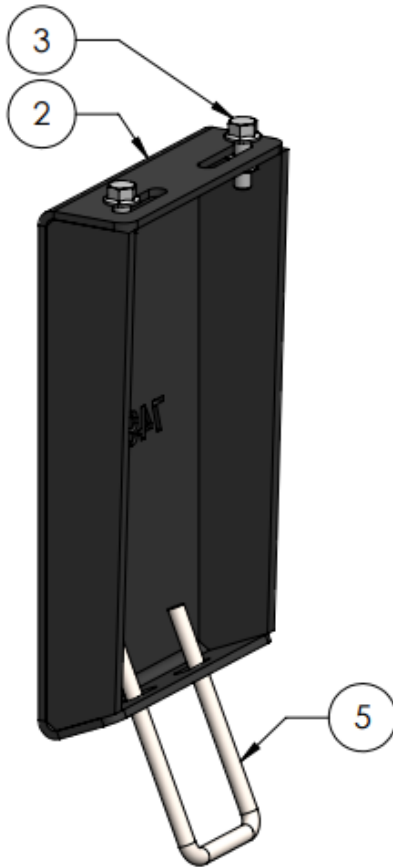



Bracket Install Instructions

1. Using the u-bolts provided, loosely mount 7491Y1 & 7492Y1 to hitch.
2. Using the 1/2" hardware provided, loosely mount Torpedo to mounting brackets.
3. Check for any clearance issues and tighten down hardware. *Check the inlet plumbing clearance on the hitch.*

