




Step by Step Instructions for Installing Torpedo 300

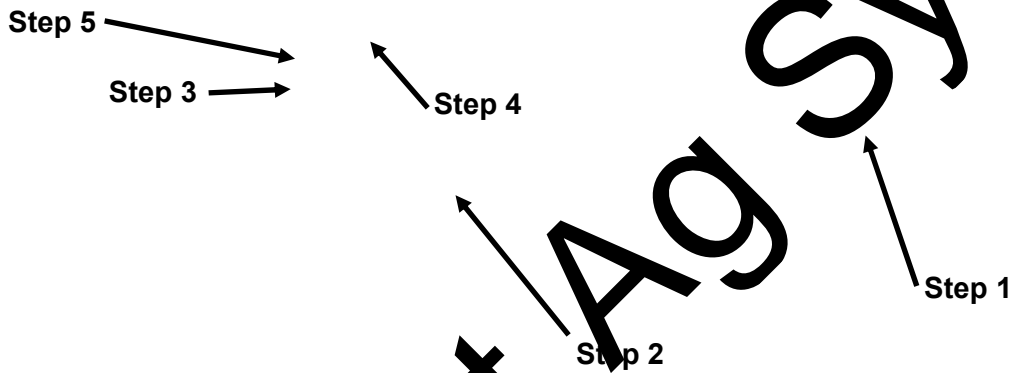

1. Follow Steps 1-3 on Page 4 for mounting the Torpedo Bracket w/ 'Z' Brackets to 5"x7" Bar.
2. Install 3047Y1 Bracket as shown in above picture. Do not tighten the Nuts on the U-bolt.
3. Bolt Adjustable Support Bracket (202-2740Y1) to the top of 3047Y1 Bracket as shown using provided hardware.
4. Once the Torpedo Bracket has been mounted with "Y" Splitter, slide and adjust 3047Y1 bracket until holes on top of 202-2740Y1 Bracket line up with "Y" Splitter holes. Insert Bolts and tighten "Y" Splitter to Bracket. Tighten U-bolt.
5. Tighten nuts on adjustable bracket.