


396-5190Y1 4x4 PumpRight Mount Extension Bar Mounting Instructions

Kit Number: 515-03-2016

Kit Description: PumpRight 4x4 Extension Mounting Bracket Kit

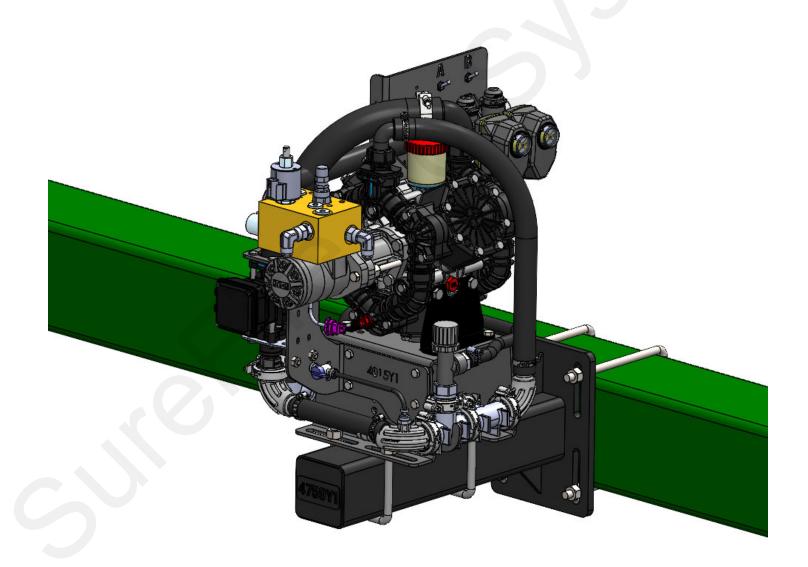



Parts List and Instructions

Ag Syste ITEM			
NO.	PART NUMBER	DESCRIPTION	QTY.
1	380-1023	1/2" U-bolt Kit - fits 4" x 4" - (4" opening) includes flange nu	its 2
2	400-4759Y1-BK	Saddle Tank Pump Mounting Bracket - 4x4 Tube	1
	475011	U-bolt may vary	
[10.50in] 266.70mm		[4.00in] 101.60mm 444.50mm [20.50in] 520.70mm	
1. N U N 2. N	Allation Instructions: Mount the 400-4759Y1 in Ising u-bolt kit as specific Note: The u-bolt size with Model or configuration. Mount the PumpRight p provided 4x4 u-bolts.	mounting bracket fied. <i>Il vary by implement</i>	Step 1