



#### 396-5026Y1

### Gen3 LiquiShift Zip Valve Toolbar Mounting Bracket Instructions

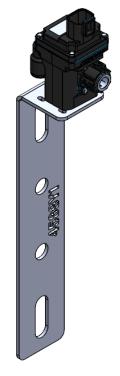

Kit Number: 515-01-300300
Gen3 Zip Valve Toolbar
Mounting Bracket

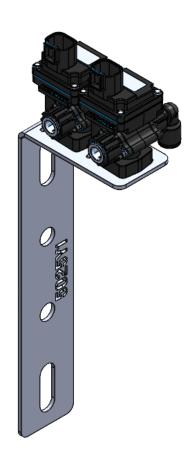


Kit Number: 515-01-300350
Gen3 Zip Valve Toolbar Mounting
Bracket - Dual Product



# Parts List and Exploded View 515-01-300300 Single Zip Valve

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	400-4589Y1	Gen3 Zip Valve Toolbar Mounting Bracket	2
2	103-4496Y1/103-5016Y1	Zip Valve 1/4" Nylon, 2-way, SS Ball, 3/8" Push to Connect, Deutsch Connector	2
3	757-97349A200	Size 6 Thread Forming Screw for Plastic - SS	7
4	113-12-038038	Black Composite Stem Elbow - 3/8" Stem x 3/8"	2

\*Each kit includes parts for mounting two zip valves

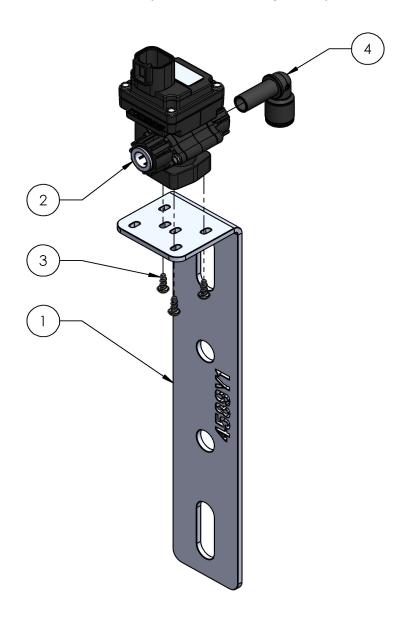




# Parts List and Exploded View 515-01-300350 Dual Product Zip Valves

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1		Gen3 Zip Valve Dual Product Toolbar Mounting Bracket	2
2	103-4496Y1/103-5016Y1	Zip Valve 1/4" Nylon, 2-way, SS Ball, 3/8" Push to Connect, Deutsch Connector	4
3	757-97349A200	Size 6 Thread Forming Screw for Plastic - SS	13
4	113-12-038038	Black Composite Stem Elbow - 3/8" Stem x 3/8"	2

\*Each kit includes parts for mounting two zip valves

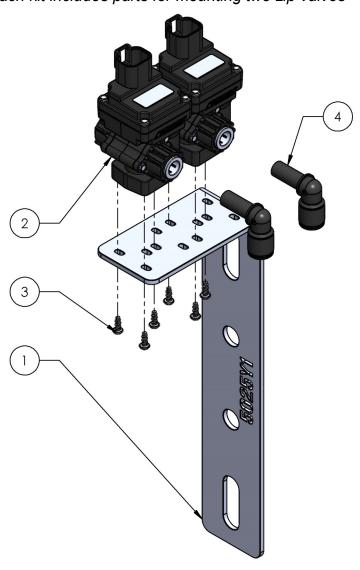





#### Step by Step Instructions

Note: The same basic instructions apply to the single and dual product zip valve mounting.

1. Attach the Zip Valve to the mounting bracket using the provided thread forming screws. Do not overtighten or strip the plastic body.

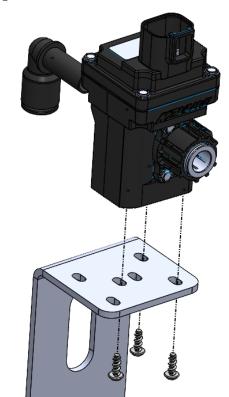

2. Attach the mounting bracket to the toolbar using the provided u-bolt. The valve can overhang the toolbar or be installed directly above the toolbar.

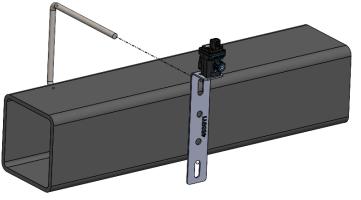

3. Route 3/8" OD tubing or 3/8" OD hose from the flow indicator or Sentinel Flowmeter Module to the row unit. Use the provided 3/8" Stem x 3/8" QC elbow as needed to make a sharp turn into the valve.

Note: Lubricate 3/8" tube or tube fitting and make sure 3/8" OD tubing is cut off flush and clean prior to installation to avoid rolling the o-ring.

