




Step by Step Instructions

QuickDraw Connections:

1. Route Pump Stop harness (P/N 208-05-2802Y1 or 208-05-2633Y1) inside the QuickDraw cabinet and connect 150MP Shroud to male connector labeled "**Motor Disable**". *Note: The connector may have a dust cap that needs to be removed.*
2. Route 12V Pump Power Harness (P/N 208-05-2430Y1) inside the QuickDraw cabinet near the battery mount and connect to "**Pump Power**" on the main QuickDraw Harness. *Note: The connector may have a dust cap that needs to be removed.*
3. Route 208-05-3944Y1 QuickDraw Push-Button Start Harness to inside the QuickDraw cabinet (or other desired start location). Typically, drilling a 5/8" hole in the cabinet next to the Emergency Stop Button in the side panel of the QuickDraw cabinet is an easily accessible location but the button switch can be mounted anywhere that is accessible and near the controller.

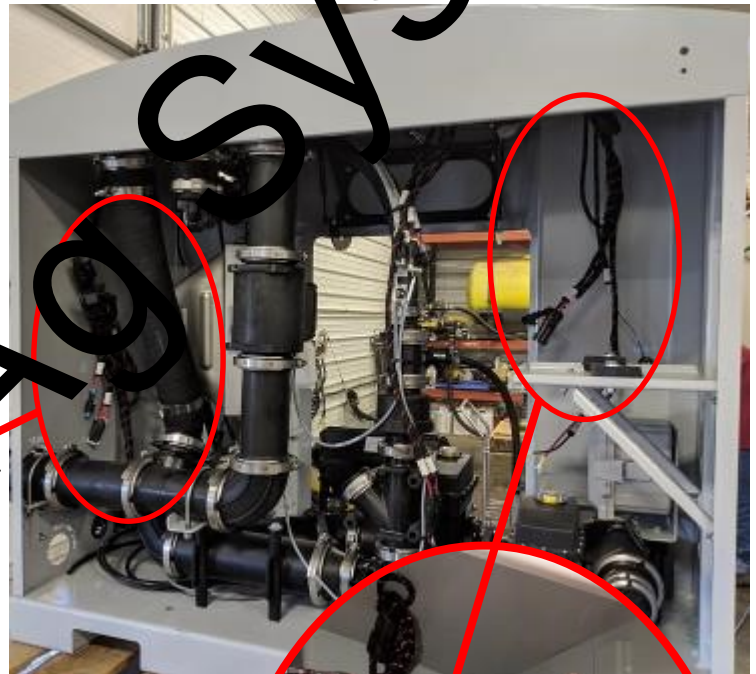

Step 1



Step 2